



## How to Use the Measure Tool

Use **Measure** to measure distances in a design or directly on the quilt.


**Step 1.** Move the machine so the cross hairs, or the needle position, are at the starting point, or zero coordinate, of the section to be measured.

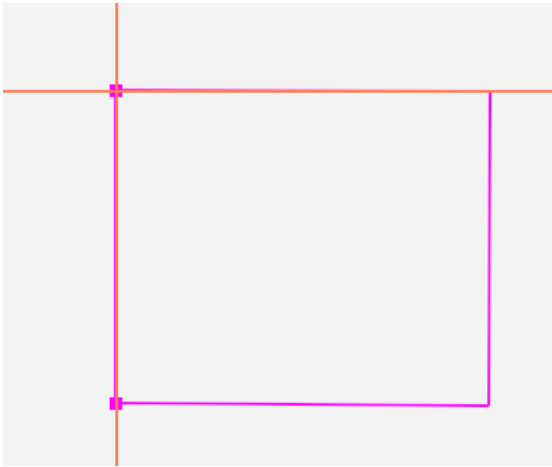

**Step 2.** Press **Measure** and move the machine to begin measuring. The ruler gives you the distance in the horizontal (x) and the vertical (y) directions, as well as the direct angular distance.

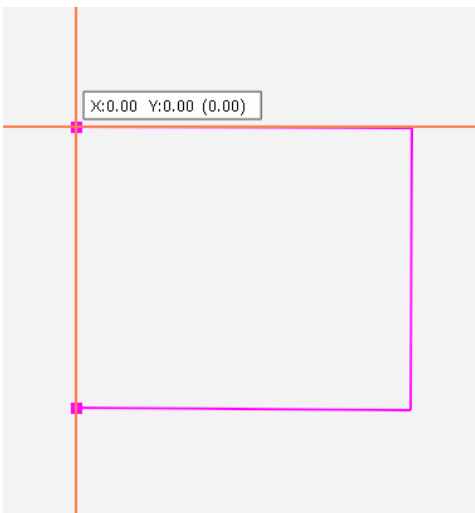

In the example below, the measurement was from the upper left corner to the lower right corner, or 2.77 inches wide (X) by 2.34 inches high (Y), and 3.63 inches from corner to corner.

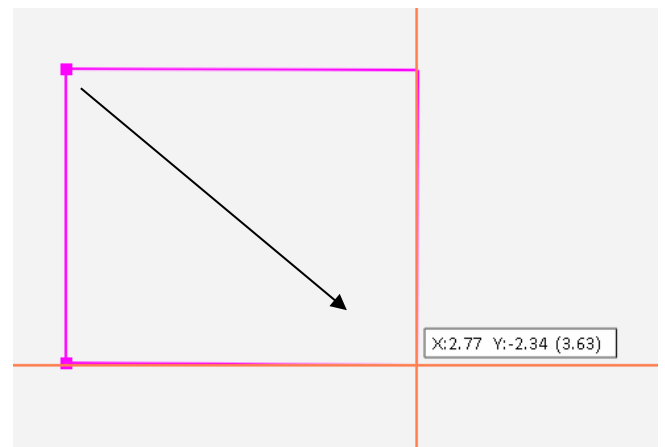

**Step 3.** Press **Measure** again to turn off the measurement. To reset the measurement starting point, press **Measure** to turn it off and then press **Measure** to turn it back on after you have moved the cross hairs to where you want to again begin measuring.