



Off-Setting an Edge to Edge

- Press **Design**.
- Press **File**.
- Press **Open**.
- Double tap on:

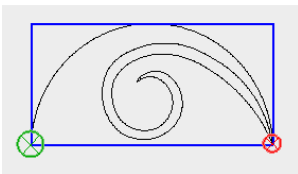

- **Designs/HQ Designs/ Continuous Line/Clam Shell with Curl**
- Press **Area**.
- Move machine to the top left corner of quilt top.
- Press **2 Corner**.
- Move machine to the right edge of the quilt.
- Press **2 Corner**.


Type in the height of the quilt since the machine cannot reach the bottom of the quilt.

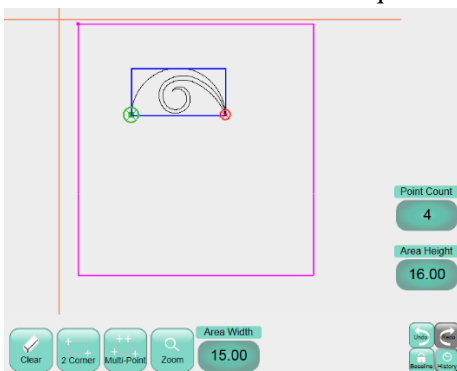


- Press **Repeat**.
- Press **Main**.




- Press **Fit**.

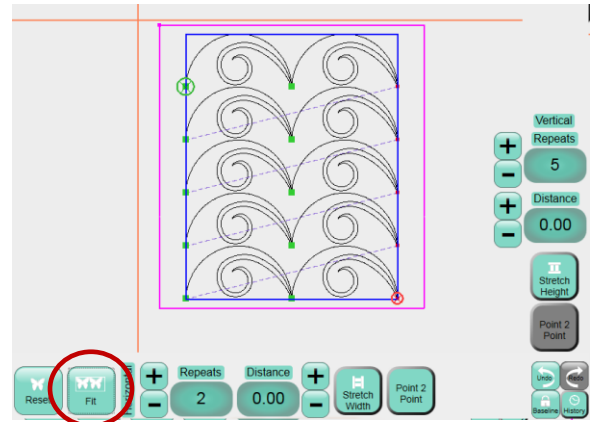


- Using the “**plus**” button add more **Horizontal** and **Vertical** repeats if you like more.
- **Tip: The more repeats you add the smaller each design will become.**

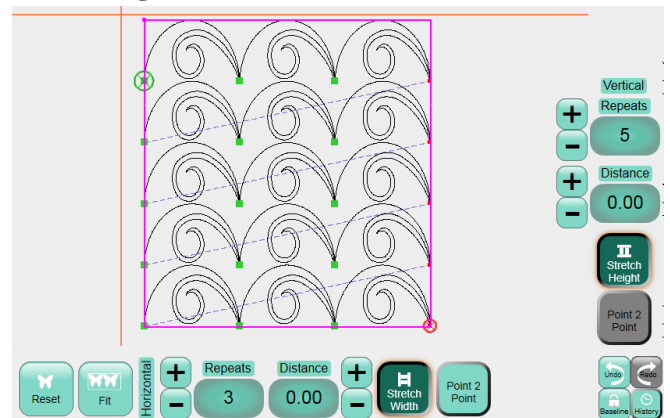


- Press **Stretch Width**.
- **Stretch Height**.
- Press **Wrapping**.

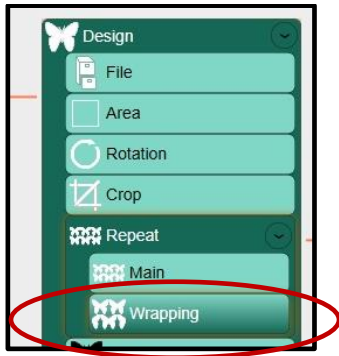


- Press **Baseline. Important!**

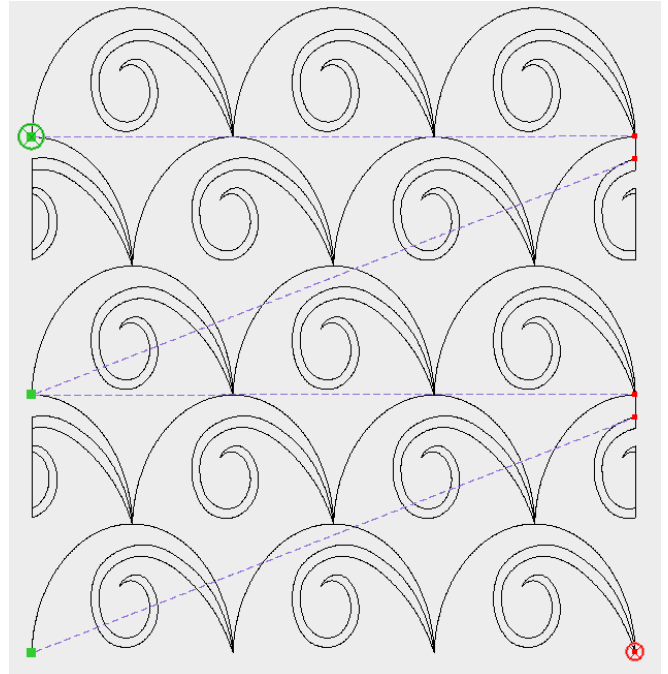


- Press the “**1/2**” Button that is associated with **Row.**

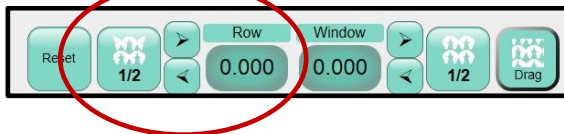

If a design needs more or less than a 50% offset, then press the directional arrows that are associated with the Row Function. You can also type in a number in the number box to create a desired offset.

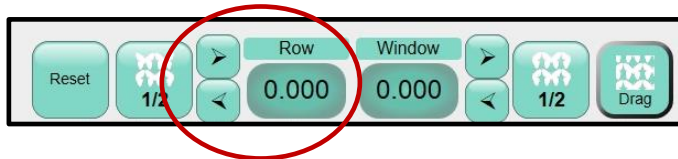

- Press **Quit.**
- Press **Run.** Verify settings.
- Press **Proceed.**

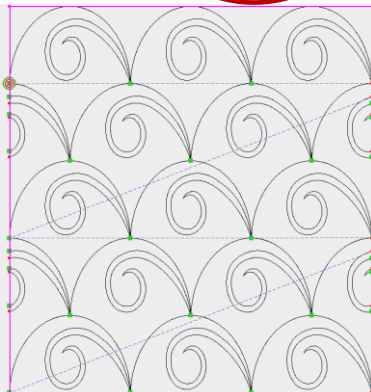

- Press **Closed.** Each loose end created after cropping the side will be tied to the next end point by stitching along the border of the area to get to the next point.